 


Cordless Stick Vacuum Cleaner

Instructions for use

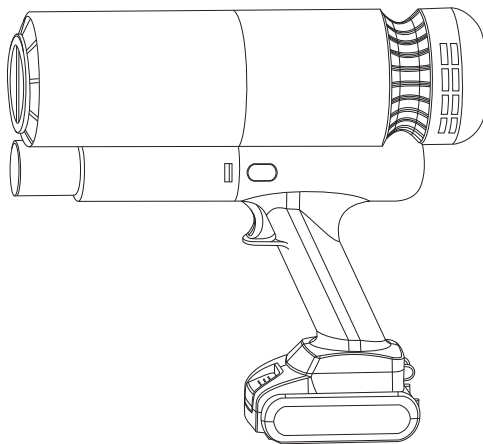

Please read these instructions in full before using the product. The instructions should be kept in a safe place for future reference.

Safety instructions

Restrictions on use

- Do not use it outdoors, commercial and industrial environments.
 - Do not allow children to use the product as a toy and supervise children to keep them as far away as possible when using it.
 - Do not use it in the environments above 40° C or below 4° C or in humid conditions.
 - Do not allow persons with physical, mental or sensory impairments to use or operate the product.
 - Do not allow human or pet to come close to the rotating position of the brush head while the brush head is in operation to avoid injury.
 - Do not touch the plug of power adapter or use the product with wet hands to prevent injury.
 - Do not use it to vacuum any liquid (e.g. water, cola, etc.).
 - Do not use it to vacuum any burning or smoking objects (e.g. unextinguished cigarette butts, etc.).
 - Do not use it to pick up hard or sharp objects (e.g. decoration waste, glass, nails, etc.).
 - Please use the product in accordance with the instructions, any damage caused by improper use is the responsibility of the user.
- This product is intended for use at altitudes of up to 3,000 meters.

Batteries and charging

 
- This product can only be charged using its own power adapter. -Do not use any third party batteries, power adapters or charging stands.
- Do not disassemble, repair or modify the battery, power adapter or charging stand yourself.
- Do not charge or install the charging stand in areas near heat sources or moisture (e.g. radiators, bathrooms).
- Do not clean the power adapter or charging stand with a wet cloth or wet hands.
- Do not dispose of the battery at will, it should be disposed of by a professional recycling organization.
- If the power cord is damaged or broken, please stop using it immediately and contact customer service for assistance.
- If the product is not used for a long period of time, please unplug the power adapter after it has been fully charged and place it in a cool, dry place and recharge it at least once every 3 months to avoid over-discharging the battery.

Shipping

- If you need to transport the product, it is recommended to use the original packaging.
- Note: Clean the filter with tap water at least once a month, for details please check: Maintenance and Care.
- The company reserves the right to amend and interpret this manual. This manual is subject to change without notice.
- We endeavor to ensure the accuracy of the information on the functions and features of the products described in this manual, but accept no liability for any errors, omissions or discrepancies between this manual and the products.


Products

Body

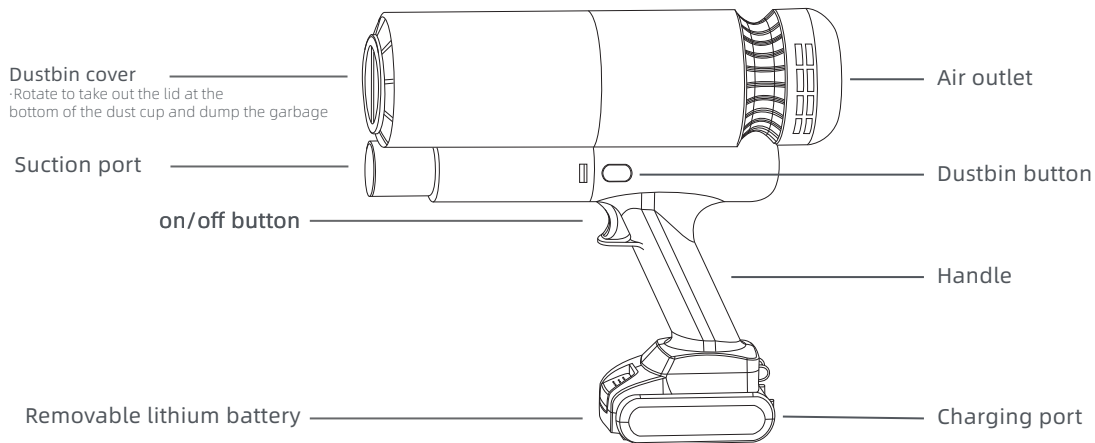

Products

 
Accessory list

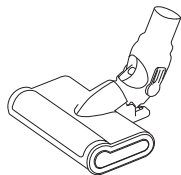

Floor brush



 
Filter element cleaning brush




Brush



 Anti-direct blowing plug

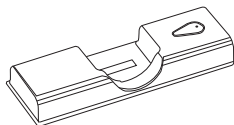


Water tank

 


Crevice head



 Type C charge line




lithium battery

 

Blower nozzle



 Blower nozzle




Extension pole

Caution: The actual parts are related to the package purchased, please follow the display on the page of the purchase channel and negotiate with the seller!


Installation

Installation diagram of the Body and accessories

 Way 1 Body + Two-Section metal rod + Floor brush + Water Tank

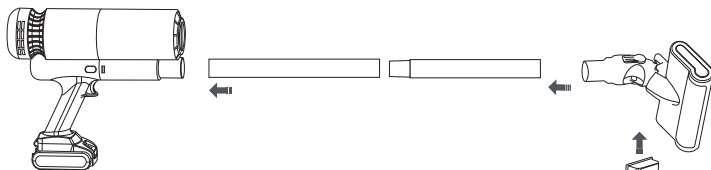

 
Way 2 Body connected directly to the Crevice nozzle+ Brush nozzle

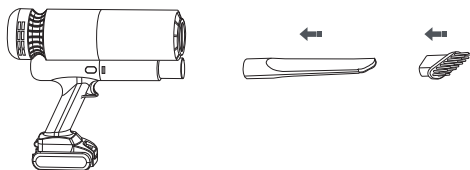

Caution:

The actual parts are related to the package purchased, please follow the display on the page of the purchase channel and negotiate with the seller!

 Way 3 Body + Blower nozzle

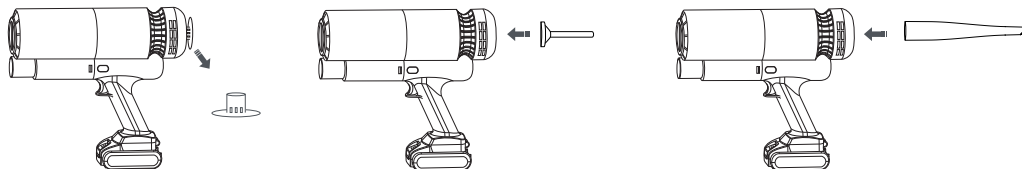



Remove anti-direct blowing plug

Instructions for use

Start and stop the vacuum cleaner

Press the switch button once to start the vacuum cleaner.

  Press the switch button twice to turn off the vacuum cleaner.

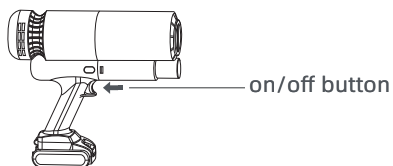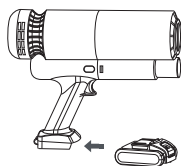

Charging


The vacuum cleaner supports direct charging from the power adapter.

Caution:

- The vacuum cleaner will not work while it is charging.
- The battery temperature is high after continuous use in the accelerator position and charging may be slower at this time.

Troubleshooting tips

If the vacuum cleaner does not work properly, please refer to "Troubleshooting" for solutions.

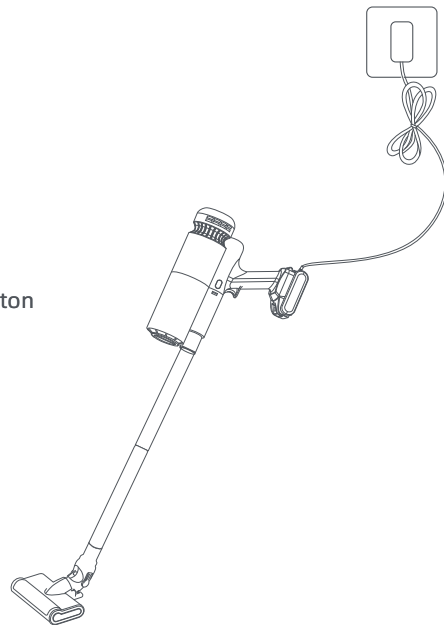

Direct charging with phone adapter

Instructions for use

Precautions in use

1. When sweeping with a handheld Hoover floor or bed brush, some fabric surfaces may become limited or difficult to push. If this happens, it is recommended to use a brush or crevice nozzle when vacuuming.
2. Before vacuuming highly polished floors (wooden floors or polished tiles), check that the floor brush (especially the brush head position) is free from foreign objects that could scratch the floor.
3. Before using the handheld Hoover, make sure that the dust container, HEPA filter are in place.
4. Do not block the exhaust port when vacuuming.
5. For fine dusts such as flour and decorative dusts, use the Hoover only when the dust level is low.
6. Do not use the Hoover to pick up sharp and hard objects, small toys, pins, paper clips, etc. to avoid damage to the Hoover and the floor.
7. Please pay attention to personal safety when using this product to clean dangerous areas such as stairs and windows.
8. Do not place the product on high places such as tables, chairs or lean on other objects to avoid damage caused by slipping or tipping.
9. The movement of the Hoover brush may cause an uneven surface gloss on waxed floors, so wipe the floor with a damp cloth and polish with floor wax.

Cleaning foreign objects

1. When the brush nozzle is working, it may be blocked by inhaling large foreign bodies or entangling too much hair. In this case, it needs to be cleaned up in time.

2. Make sure that the brush nozzle is disconnected from the Body before cleaning the entangled foreign body. This will prevent the machine from being started by mistake and causing personal injury.

Scenarios for the use of accessories

1. Crevice nozzle

Suitable for cleaning small crevices such as doors, windows and stairs.

2. Brush nozzle

Suitable for cleaning sofas, seats, etc.

3. Hose

Suitable for cleaning dust from corners and gaps that are difficult to reach with straight suction nozzles.

4. Filter cleaning brush

Suitable for cleaning dust on the filter screen of vacuum cleaners.

5. Wall hanging

Easy to place and store vacuum cleaner

6. Large blowing nozzle, small blowing nozzle

Suitable for home barbecue, fire, air cushion bed, small kayak, swimming ring, etc.

Care and Maintenance

Product care

1. Please make sure that you use original parts, otherwise you may not be able to enjoy the warranty service.
2. If the filter or suction head is clogged, the fan will stop working intermittently for a few times, please clean the filter and suction head in time.
3. If the product is not used for a long time, please unplug the power adapter after a full charge and place it in a cool and dry place, do not place it in direct sunlight or in a humid environment. Charge the battery at least once every 3 months to avoid over discharging.


Cleaning the body

Clean the body with a soft dry cloth, do not wash.

Cleaning the dustbin

1. Before cleaning the dustbin, turn off the power supply and turn off the vacuum cleaner. If there is too much dust in the dustbin, the effect of vacuuming will be affected. Please clean the dustbin asap before using it.
2. If you want to dump the garbage, rotate and take out the lid on the edge of the dustbin to pour out garbage directly

3. Press the button of the dustbin to take out the dustbin. Tilt 45 degrees with your hand and take out HEPA
 4. Rinse the dust container with clean water. It is recommended to clean it at least once a month. If the conductive contacts are dirty, wipe them with a soft dry cloth.
- Do not use detergents, polishes or air fresheners to clean the dust container.
 - Do not wash the dust container in a dishwasher etc.

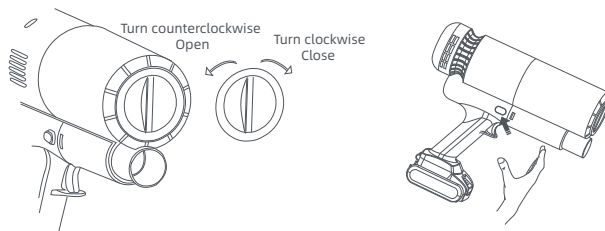

Cleaning of the Filter

***We recommend cleaning at least once a month**

- Before preparing for cleaning, ensure that the product is disconnected from the power adapter and take care not to press the switch to start the machine

1. Press the dustbin bottom to remove the dustbin.
2. Take out the filter .
3. Rinse the filter with cold water until clean. After rinsing, shake the filter dry.
4. The filter shall be air-dried for at least 24 hours to ensure complete drying.
5. After drying, return the filter.

Caution:

Do not wash the filter in a dishwasher, washing machine or dry it in a tumble dryer, oven, microwave or with hot air or open flame.

Basic parameters

Body

Name	Parameter
Product Name	Cordless Stick Vacuum Cleaner
Model	A-091
Dimensions	31X9X27.8mm
Battery	2000*3 Lithium Battery
Product Weight	≈0.91kg
Rated voltage	11.1V $\overline{\sim}$
Dust box volume	680ml

FAQ

If the vacuum cleaner fails to work properly, refer to the following troubleshooting methods

Fault phenomenon	solution
Unable to start	<ol style="list-style-type: none"> 1. If the switch button is not pressed properly, press it again. 2. The battery is out of charge or low, please charge it before turning it on again. 3. If no power is supplied to the power socket, replace it with a live socket. 4. The charging cord is not unplugged,unplug the charging cord before turning it on.
Suction reduction	<ol style="list-style-type: none"> 1. Insufficient power, full charge before use. 2. The filter element contains water. Use it after HEPA is dried. 3. The dust collector is full or the Hepa is blocked. Clean the dust collector and Hepa before use. 4. If the brush head is blocked, clear the brush head blockage. 5. Filter element aging, ventilation is too low, replace the filter.